

[ULTRA]

ULTRA SEAT CORPORATION

Remove arms according to your seat instructions. If no arms are present, move to Step 2.





Turn the back cover partially inside out leaving enough to grasp and pull over the top of the headrest portion of your seat.

Place the ur of your head pulling it do sure to adjualong the w

Place the unturned portion over the top of your headrest area and start rolling/pulling it down over your seat. Making sure to adjust and align your seams along the way.

SCAN FOR GUIDES



Guides also available at: https://www.ultraseat.com/downloads

#350300CK #350301CK #350302CK



On the front portion of the back cover push the velcro strip through the gap between back of the seat and seat cushion. Pull tight and secure velcro edges together



ULTRAJ ULTRA SEAT CORPORATION



Reinstall your seat arms according to your seat instructions.(If applicable)



Slip the cover over your seat cushion.
Push the back of the cover with the elastic
cord loops through the gap between the
back of the seat and seat cushion.



Pull the elastic cord with "S" hook around each side of the seat and secure to the elastic loop that you pushed through previously.

SCAN FOR GUIDES



Guides also available at: https://www.ultraseat.com/downloads

#350300CK #350301CK #350302CK Note: If you find the lower portion of your cover loose after installation you may need to tighten the elastic cord with the "S" hooks. To do this, simply untie the knot that holds the "S" hook in place and slide it further down the cord and re-tie the knot.

