



J SERIES ARMRESTS INSTALLATION GUIDE

1. Remove the plastic covers on each side of the seat.
2. Remove the nuts from the two studs on each side.
3. Place the arm bracket over the studs and thread the nuts back onto the studs. Do not over tighten as this may strip the studs.
4. Reinstall the plastic covers removed in step 1.

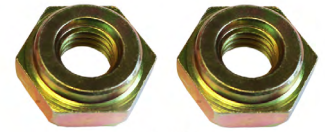

10MM NUT
200-208

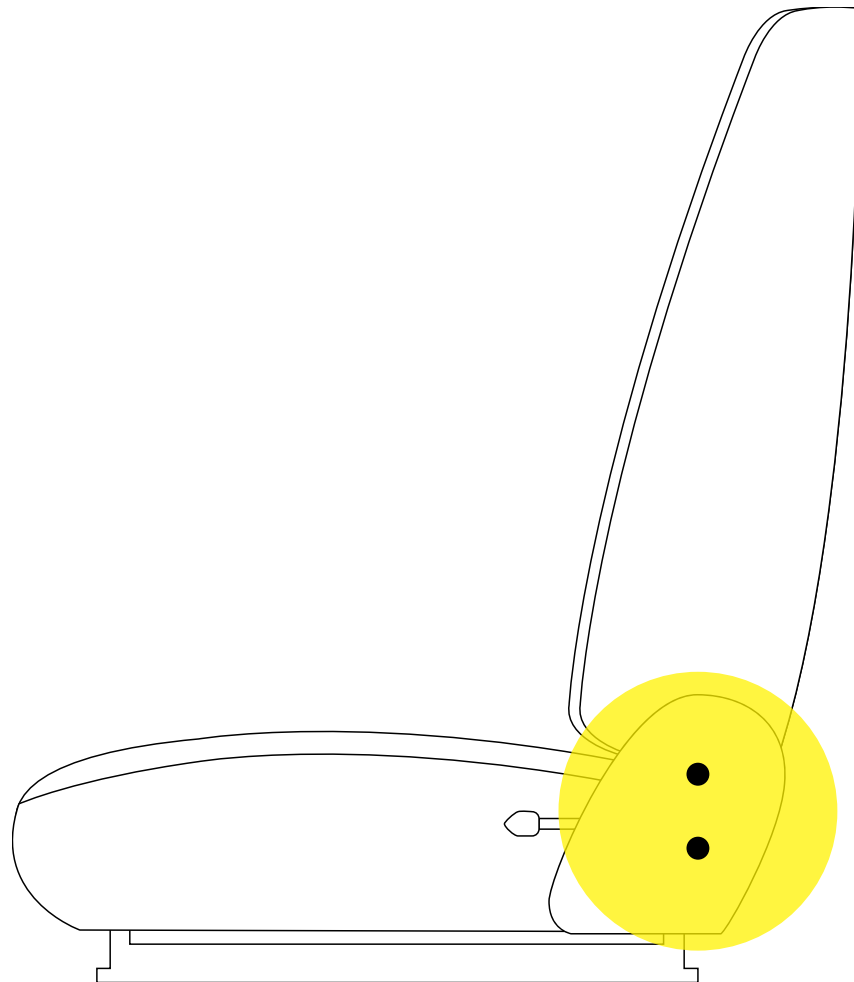

SCAN FOR
GUIDES



Guides also available at:
<https://www.ultraseat.com/downloads>

#57034

For one seated individual. Maintenance Specialist is recommended. Please visit www.ultraseat.com for more information regarding this product.