

SEATBELT INSTALLATION GUIDE



Parts Required for Installation			
200-218	E,T	Spacers	2
200-111	E,T	1-1/2" x 7/16" Bolt	2
810-65LWSR	E,T	7/16" Lock Washer	2
810-65WSR	E,T	7/16" Flat Washer	2
810-65LN	E,T	7/16" Lock Nut	2

Place the seat belt (retractor or buckle) onto the bolt first. Followed by 1 spacer, then put the bolt through the hole in the frame.

Once the bolt is through the hole in the frame use the flat washer, then lock washer and tighten with the lock nut.



Parts Required for Installation Parts			
200-218	F	Spacers	2
200-111	F	1-1/2" x 7/16" Bolt	2
810-65LWSR	F	7/16" Lock Washer	2
810-65WSR	F	7/16" Flat Washer	2
810-65LN	F	7/16" Lock Nut	2

Place the seat belt (retractor or buckle) onto the bolt first. Followed by 1 spacer, then put the bolt through the hole in the frame.

Once the bolt is through the hole in the frame use the flat washer, then lock washer and tighten with the lock nut.




Parts Required for Installation Parts			
200-218	J	Spacers	4
200-211	V	Spacers	2
200-114	J,V	2-1/4" x 7/16" Bolt	2
810-65LWSR	J,V	7/16" Lock Washer	2
810-65WSR	J,V	7/16" Flat Washer	2

Pop out plastic insert in Bolt Hole Location to reveal weld nut.

Place the lock washer then flat washer on the bolt first. Then place the seat belt (retractor or buckle) onto the bolt followed by 1 spacer.

Thread the bolt into the weld nut in the frame and tighten.

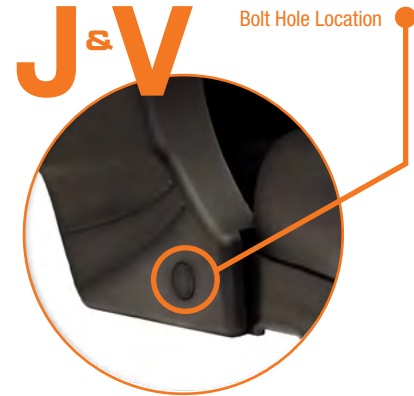

Parts Required for Installation			
200-218	M	Spacers	2
200-111	M		2
810-65LWSR	M	7/16" Lock Washer	2
810-65WSR	M	7/16" Flat Washer	2

Locate the weld nut as indicated in the illustration to the right. Carefully puncture the fabric using a razor knife. Typically an "X" cut works the best.

Place the lock washer then flat washer on the bolt first. Then place the seat belt (retractor or buckle) onto the bolt followed by 2 spacers last.


Thread the bolt into the weld nut in the frame and tighten.



Remove protective plastic cover and discard to reveal weld nut.

Place the lock washer then flat washer on the bolt first. Then place the seat belt (retractor or buckle) onto the bolt followed by 1 spacer.

Thread the bolt into the weld nut in the frame and tighten.

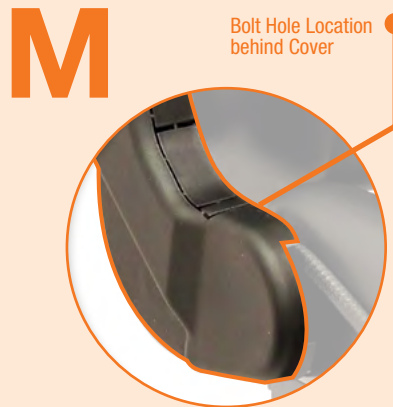


Parts Required for Installation			
200-218	P	Spacers	4
*200-174	P	M12 x 50mm Bolt 8.8	2
810-65WSR	P	7/16" Flat Washer	2
*200-178	P	M12 Lock Washer	2

Place the lock washer then flat washer on the bolt first. Then place the seat belt (retractor or buckle) onto the bolt followed by both spacers last.

Thread the bolt into the weld nut in the seat pan and tighten.

**P200 Series Bolts & Lock Washers NOT INCLUDED in Standard Kit Package.*

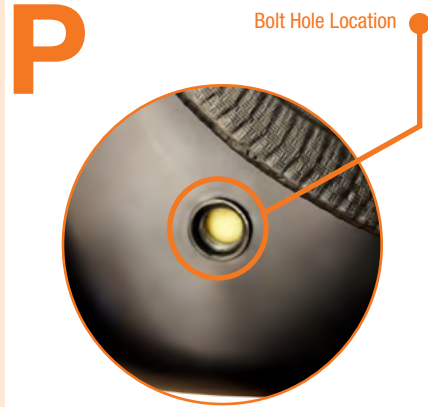

SCAN FOR GUIDES



Guides also available at:
<https://www.ultraseat.com/downloads>

##81065 & 81067